



## MANUAL TRANSFER SWITCH

### SINGLE LINE DIAGRAMS

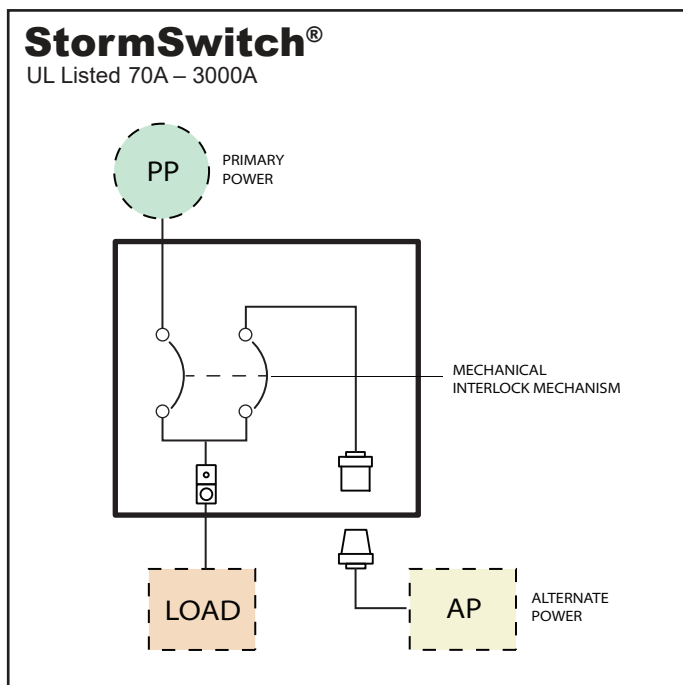

## MANUAL TRANSFER SWITCH

### SINGLE LINE DIAGRAMS

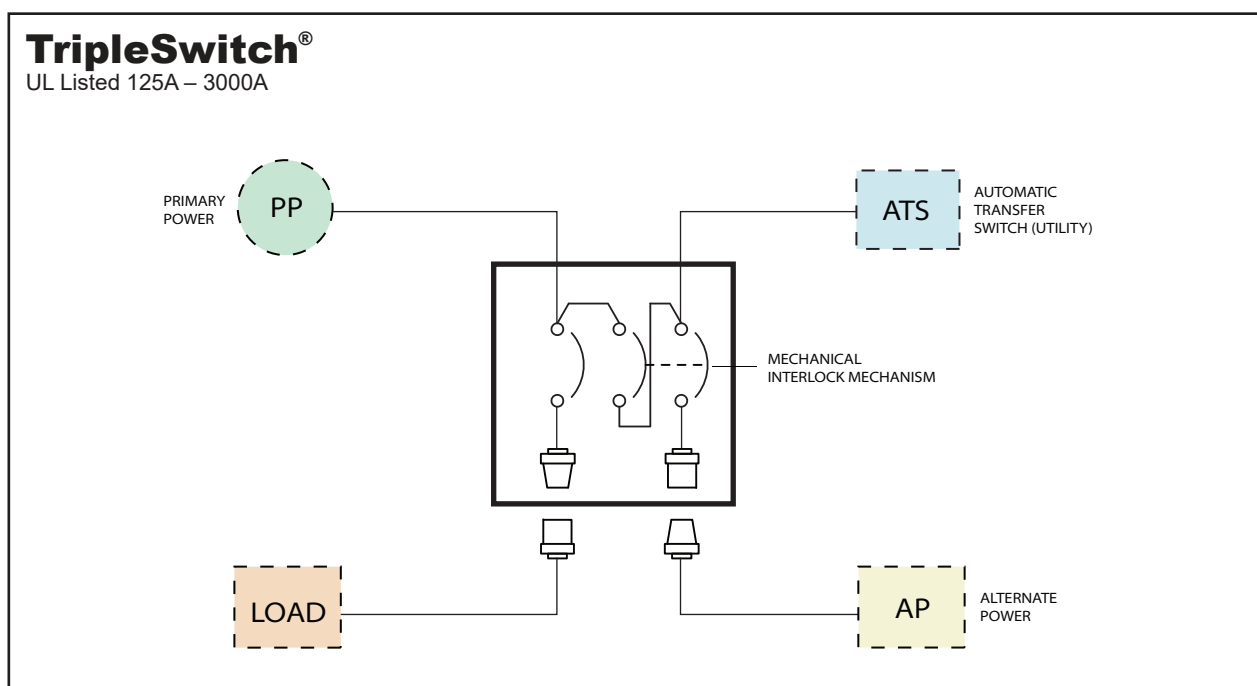


Additional amperages and configurations available.  
Contact Factory: [sales@eslpwr.com](mailto:sales@eslpwr.com) | (951) 739-7000 | 2800 Palisades Dr., Corona, CA 92878

## MANUAL TRANSFER SWITCH

### SINGLE LINE DIAGRAMS

#### RotaryConnect™

UL Listed 100A-1200A 3-Position Rotary Switch

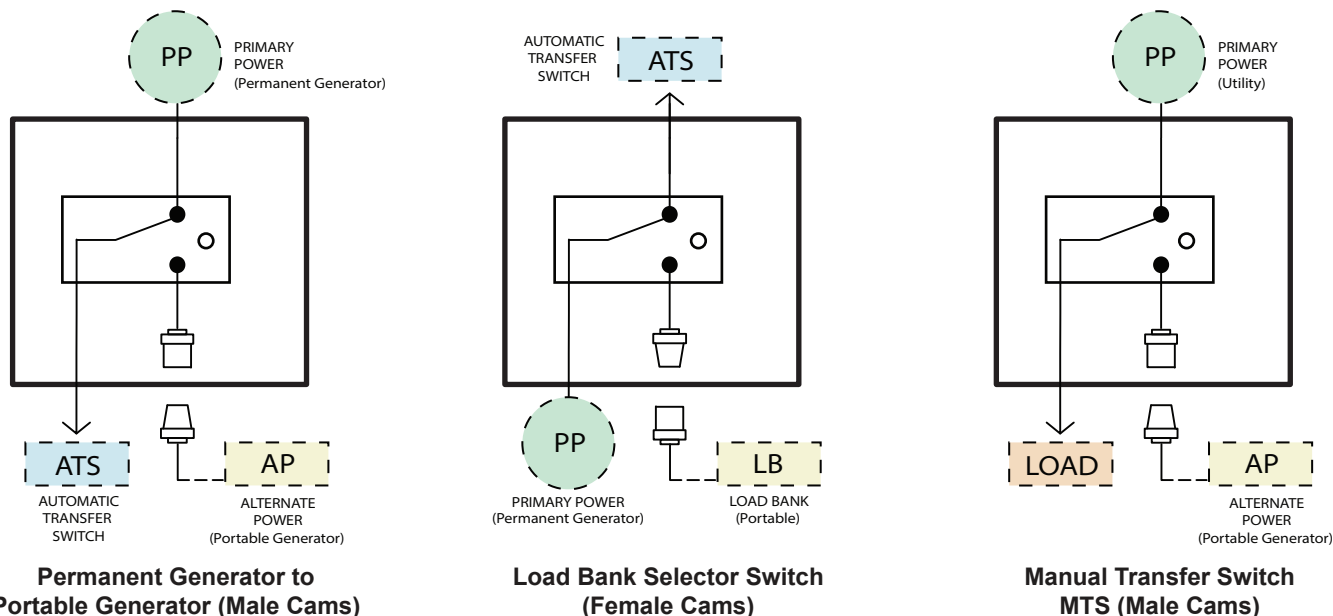


## MANUAL TRANSFER SWITCH

### SINGLE LINE DIAGRAMS


#### Dual RotaryConnect™

450A – 1200A (NRTL Available)

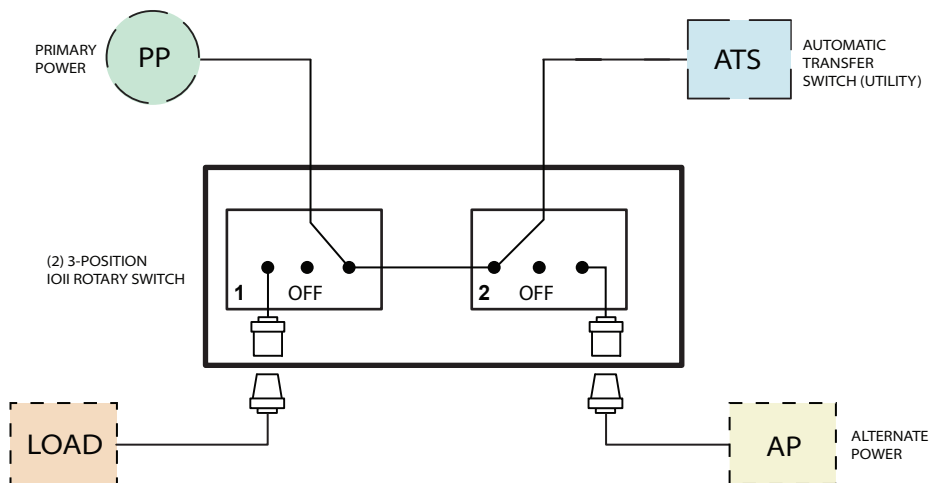


## OUTLET BOX

### SINGLE LINE DIAGRAMS

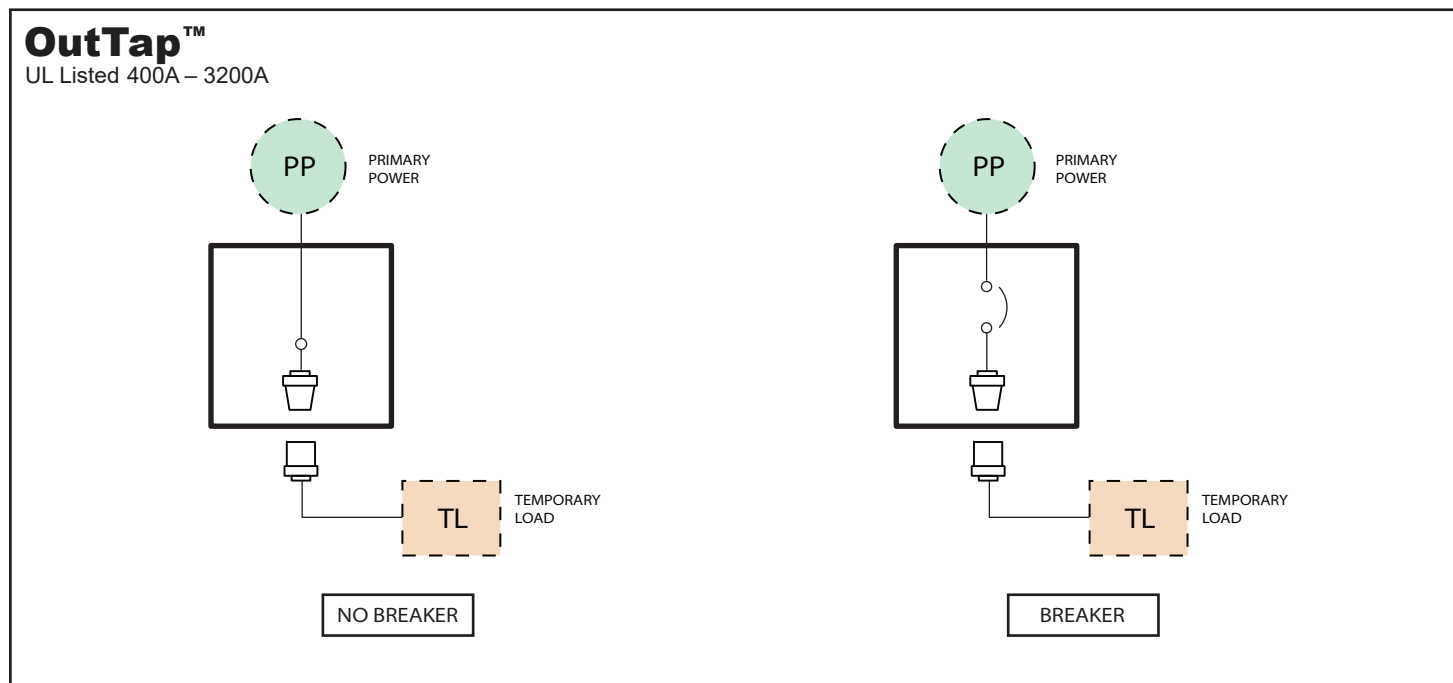


## GENERATOR TAP BOX (INLET BOX)

### SINGLE LINE DIAGRAMS

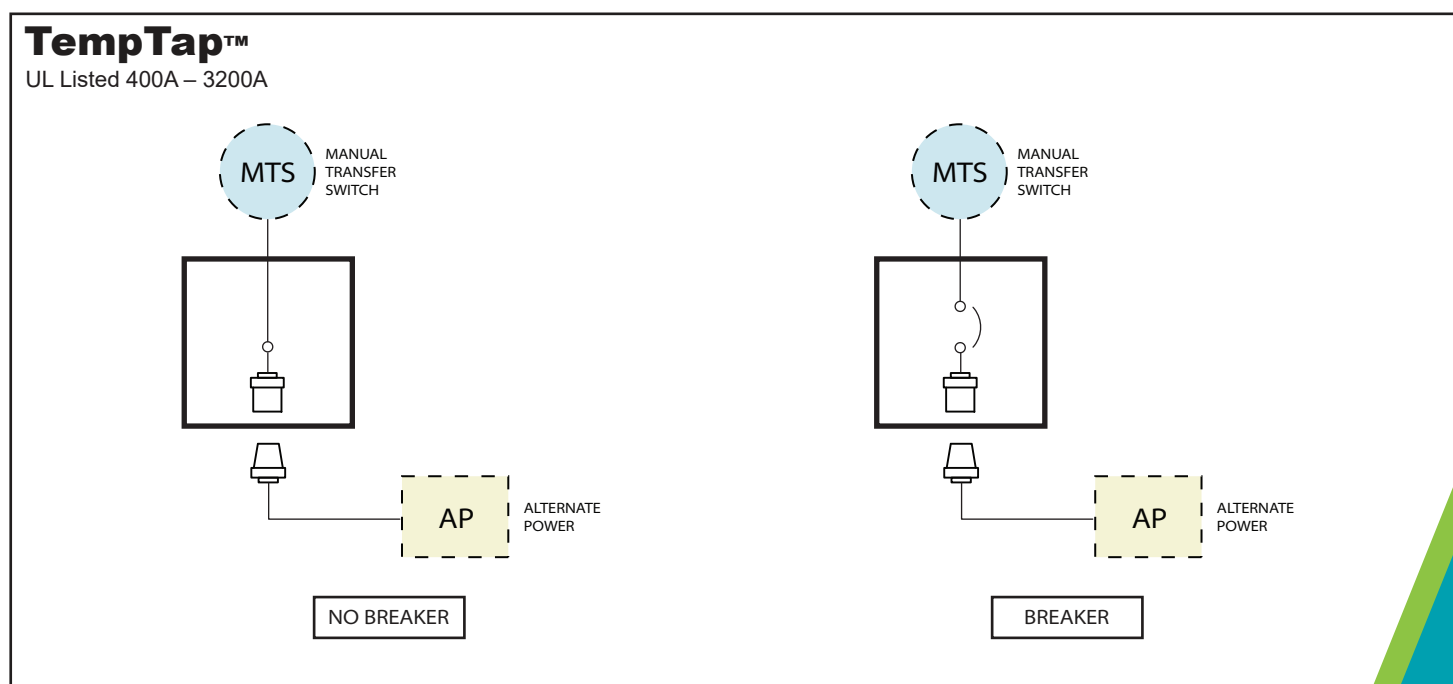


## AUTOMATIC TRANSFER SWITCH

### SINGLE LINE DIAGRAMS

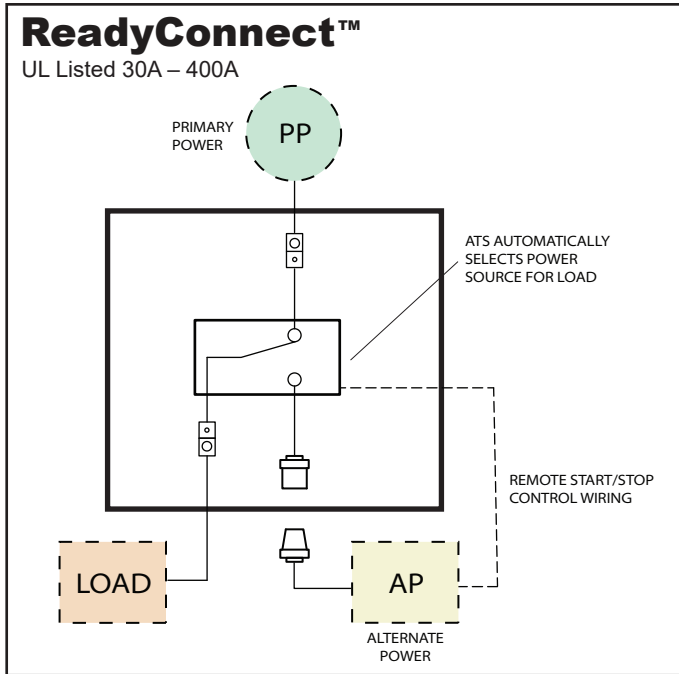

## TERMINATION CABINET

### SINGLE LINE DIAGRAMS

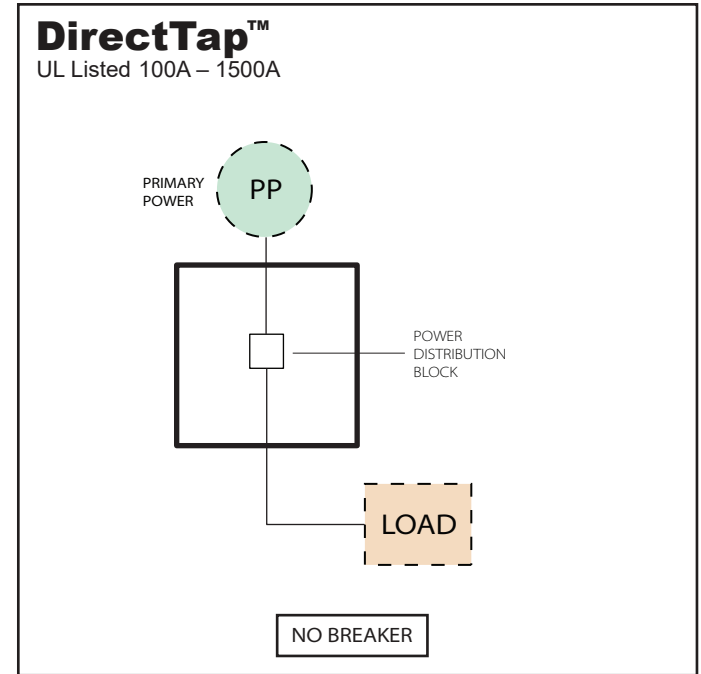

## DUAL PURPOSE DOCKING STATION

### SINGLE LINE DIAGRAMS

